

## Backstay flicker

### – gives the mainsail space to move



The backstay flicker is a glass fibre rod fitted to the head box on a fractional rig with swept spreaders. It lifts up a wire or rope backstay to allow for free passage of a full roach mainsail.



The backstay flicker comes complete with fasteners and backstay block.

### Complete kit with fasteners and instruction for assembly

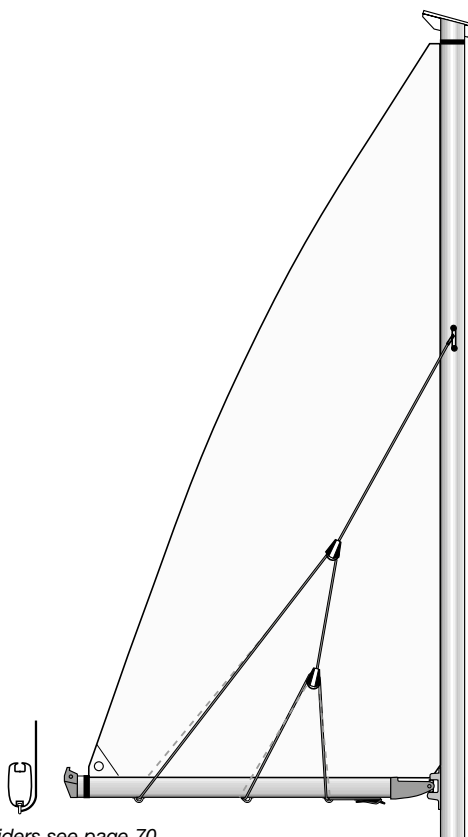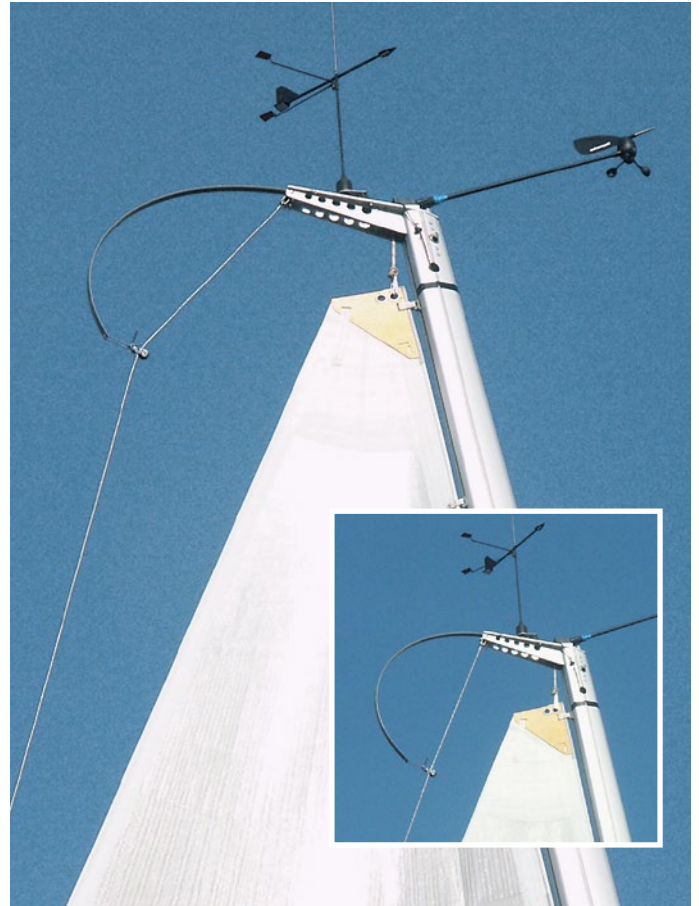

Art. No.	Batten length, mm	Boat size, ft
511-120-01	1200	< 30 fot
511-121-01	1400	30-37 fot
511-123-01	1800	37-43 fot



Lazyjack sliders see page 70.

## Lazyjack – contains the mainsail

A lazyjack system is an active aid for containing the mainsail when reefing and dousing. Our lazyjack system works exceptionally well with fully-battened mainsails, but it is also very handy for use with conventional sails. Seldén supplies complete lazyjack kits with all the necessary blocks, eye straps, lines, fasteners, boom sliders and full instructions.

Description	Art. No.	Boom sections	Remarks
 2-leg system	511-636-05R	120/62-171/94	P <sub>max</sub> = 12 m
	511-637-05R	200/117-250/140	
 3-leg system	511-636-06R	120/62-171/94	P <sub>max</sub> = 20 m
	511-637-06R	200/117-250/140	